


Start by putting together the angles for the two hinges. Then mount them on the doorplate.

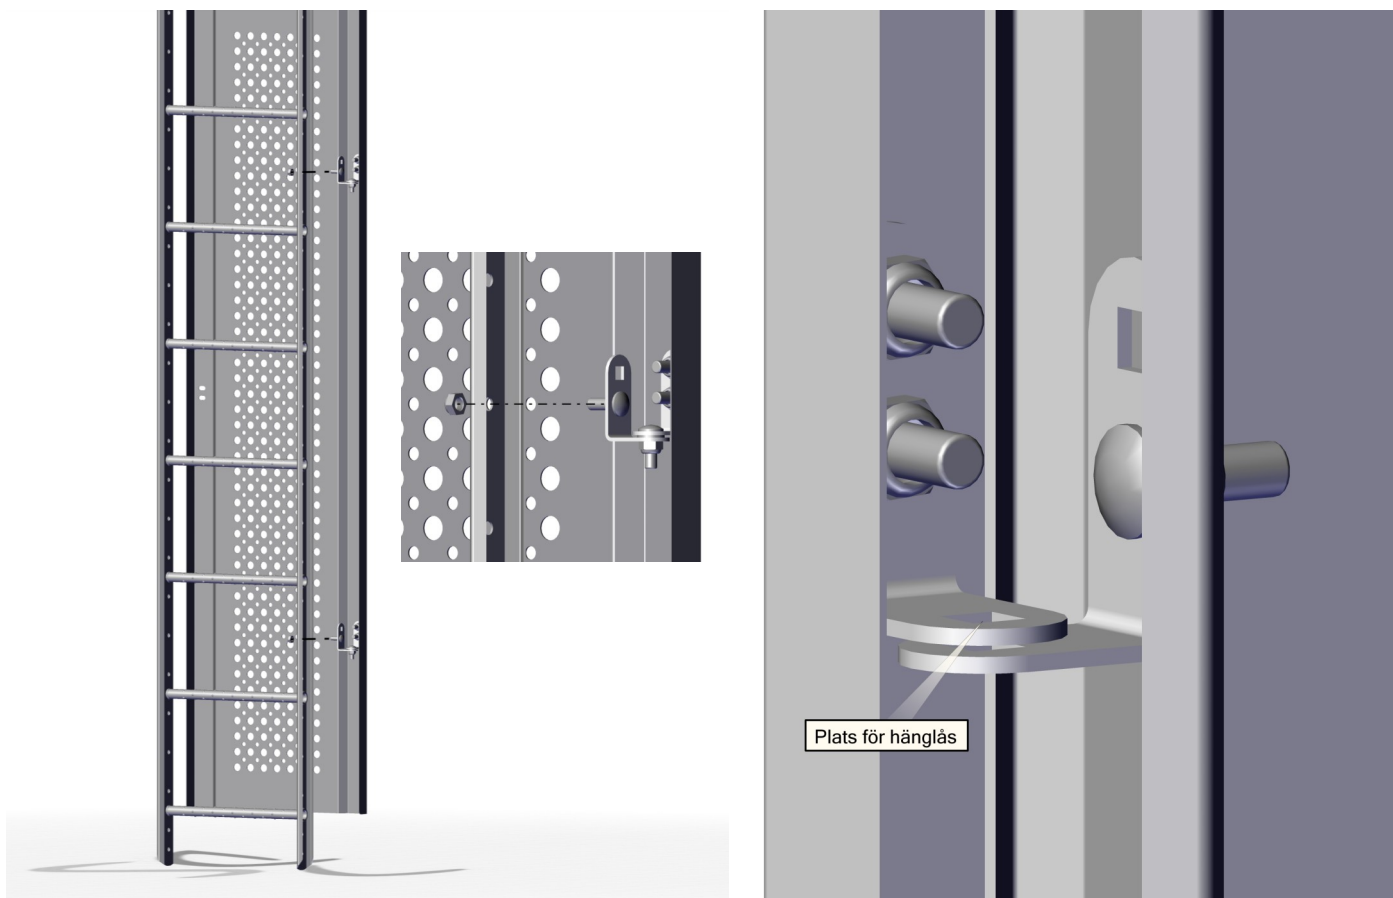

After this, mount the anti-climbing device to the ladder. Finally, the angles and doorplate for pad-lock are mounted on the ladder. A complete set consists of: 1 doorplate, 6 fixing angles, 11 M10x30 mm coach bolts, 2 M10 washers, 11 M10 locking nuts.