


Mount the ladder fittings on the fixed ladder. At the bottom, two fittings c/c 300 mm must be mounted. Use M10x20 bolt + nut.



Mount the rubber stops using 2 M10x40 + large washer + nut in the bottom end of the loose ladder and push in. For jointed ladders, it is important that it is straight.

Mount the latch using the U-fitting and hook the ladder into place.

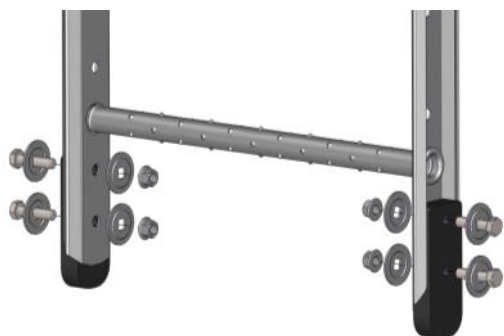

In the dropped position, the ladders must overlap each other.

