



Part	Part no.
1 Plastic cover	PL0034
2 Handrail	HL1200
3 Wrist arch	HL1240
4 Handrail brace	HL1290
5 Bolt M10x20	BU1201/BU1200
6 Nut M10	MU1001/MU1010
7 Bolt M10x60	BU1601

Part	Part no.
8 Standing platform	SP3040
9 Hinge	GJ3400
10 Gate hoop	HL5843
11 Self-drilling screw 5.5x22	SS5221/SS5225
12 Hinge half	GJ3401
13 Outer sleeve Ø42	UH0515
14 U-profile step platform	ST0425

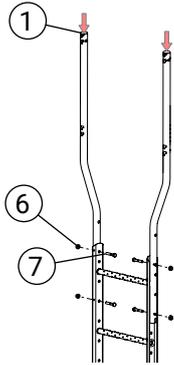


### 1 Installation of handrails

To be installed on the outside of the ladder using 2 bolts + nut (7,6) per handrail. Insert the plastic cover (1) on each handrail.

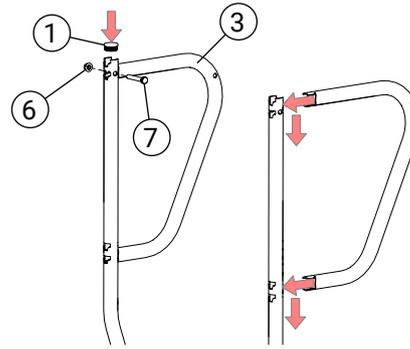


### 2. Installation of wrist arch

Tap the handrail arches (3) down into the handrail and lock using 1 bolts (7) + nut (6) per handrail. Insert the plastic cover (1) on each handrail.

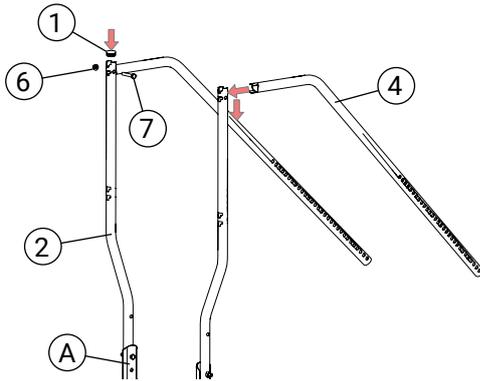


### 3. Installation of handrail braces

Tap the handrail brace (4) down into the handrail (2) and lock with 1 bolts (7) nut (7,6) per handrail. The lower end is to be installed in the roof ladders (A). Insert the plastic cover (1) on each handrail.

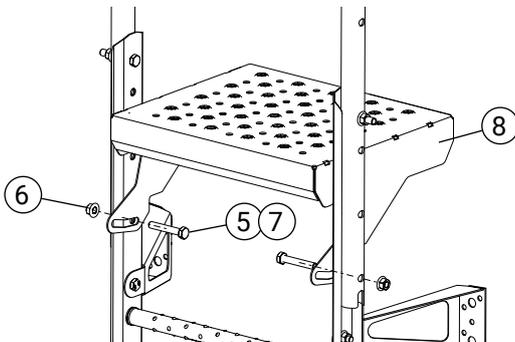


### 4. Installation of step plate

The step plate (8) is to be hooked on the top rung and bolted to the side of the steps (7,6 or 5,6).

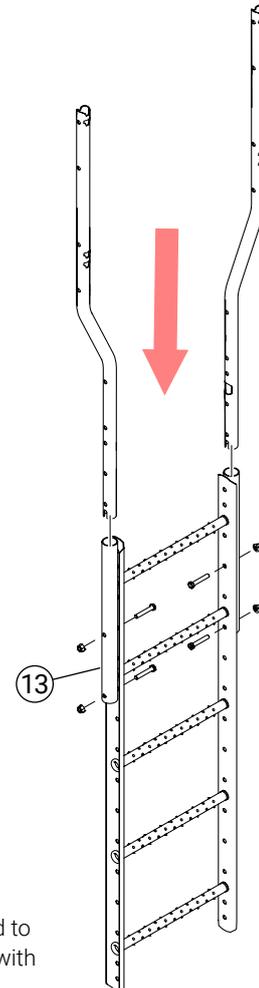


### 5. Installation of loose handrail

Outer sleeve (13) is bolted to the outside of the ladder with 2 bolts + nut per sleeve.

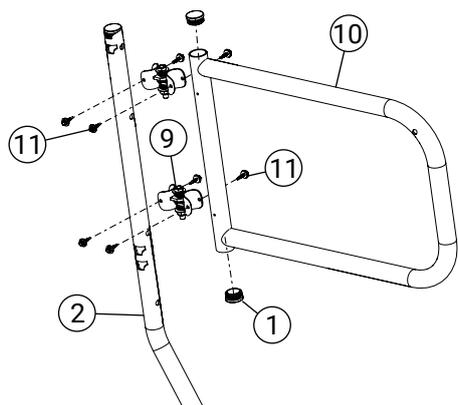


### 6. Installation of hinges

Fit the hinges (9) to the gate frame (10) using 2 self-tapping screws (11) per hinge in the pre-drilled holes. Then install handrails (2) using 2 self-tapping screws (11) per bracket. Insert 2 plastic covers (1).

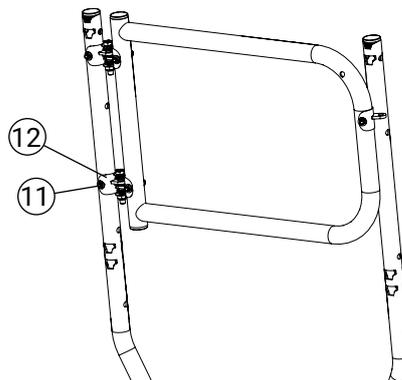


### 7. Installation of loose lugs

Install the hing halves (12) using 2 self-tapping screws (11) per half.




### 8. Installation of loose hinge half

Make sure the hinge half ends up against the handrail.

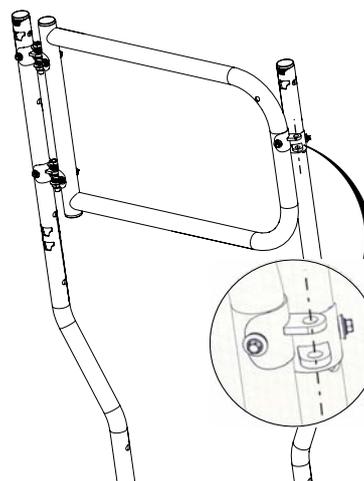

### 9. Installation of hinge halves for locking

Make sure the holes of the hinge halves line up in order to put in a lock.

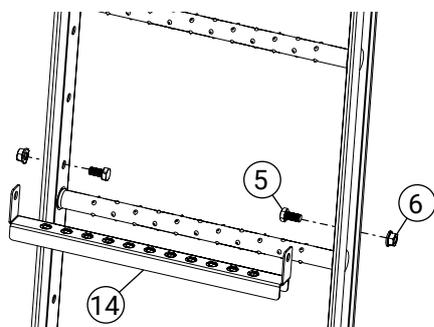

### 10. U-profile step platform installation

The U-profile step platform (14) is installed using 2 bolts (5) + nut (6).