



	Part	Part. no.
1	Footplate	FP3000
2	Bolt M10x20	BU1020
3	Wood screw 6x30	TS0630

NB Follow the boiler manufacturer's recommendation about any opening in the boiler.

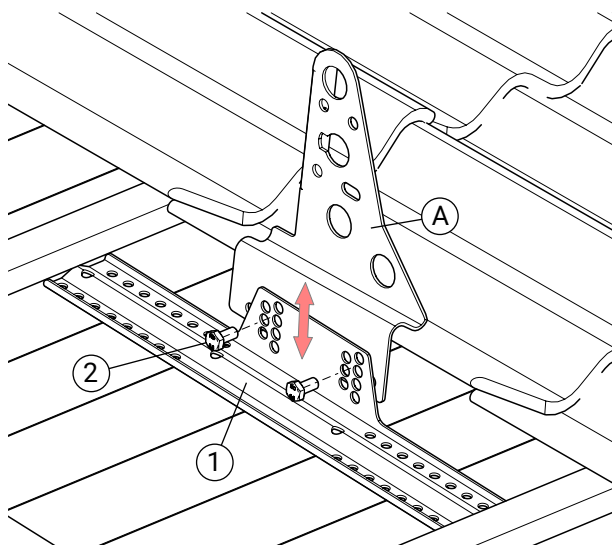

1. Height adjustment

Adjust the height of the bracket (A) so it fits against the roofing tile. Make sure there is a gap of approx. 2-3 mm. Install bracket to the footplate (1) using 2 bolts (2).

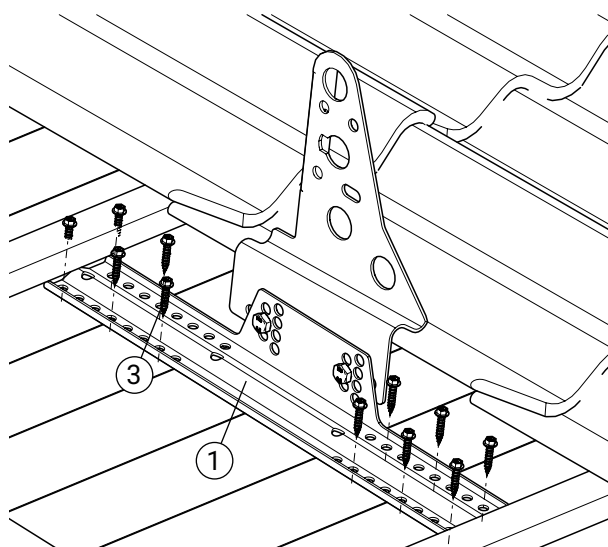

2. Fastening

Screw the footplate (1) to the under-roof using 10 wood screws (3).

NB 2 screws at each end and the rest evenly distributed across the holes. Use a screwdriver with a deep stopper base so the screw doesn't go round and lose its grip.

