


	Part	Part. no.
1	Folding ladder	FS1250/FS2450
2	Joint set (Contains 2a to 2f)	FS2000
3	Wall bracket, folding ladder	FS0012
4	Lock cover set (Contains 4a to 4d)	FS1000
5	Bolt M10x60	BU1601
6	Flange nut M10	MU1001/MU1010
7	Bolt M8x70	BU0870
8	Red plastic-coated wire	FB0010
9	Spacer washer 35x40x5	MB3545


	Part	Part. no.
2a	Joint profile, folding ladder	FB0080
2b	Carriage bolt M8x20	XBV0820
2c	Locking nut M8	LM0800
2d	Tread surface, folding ladder	FS0500
2e	Bolt M8x55	BU0855

4a	Cover, folding ladder	FS0050
4b	Bolt M8x70	BU0870
4c	Locking nut M8	LM0800
4d	Spring for cover	FOLDING LADDER SPRING

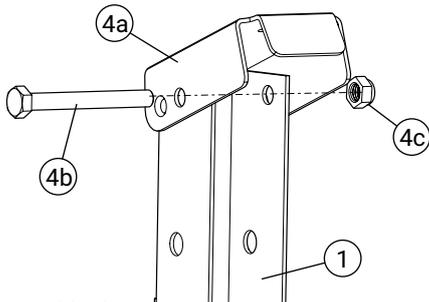


### 1. Installation of lock cover

Install the cover (4a) at the top of the ladder (1) using 1 M8x70 + locking nut (4b, 4c).

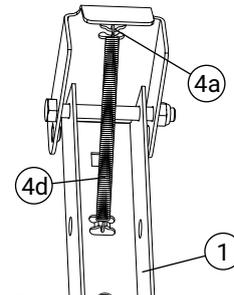


### 2. Installation of spring

Install the spring (4d) in the front edge of the cover (4a) and to the ladder (1).

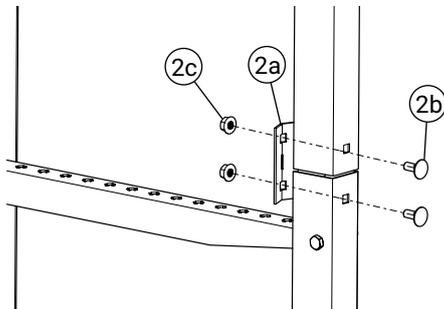


### 3. Joining ladders

In the case of more than one module, the ladders are joined together using 2 joint sets (2). Joint profile with 2 coach bolts + nuts (2a, 2b, 2c).

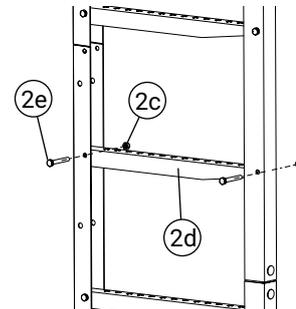


### 4. Tread surfaces between ladder joints

Fit an extra tread surface (2d) between the ladder joints using 2 M8x50 + locking nuts (2e, 2c).

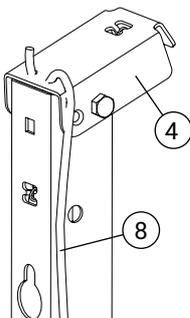

### 5. Attachment of wire at the top


Thread the wire (8) in the lock cover (4).

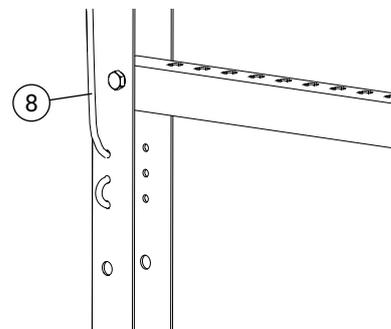

### 6. Attachment of wire at the bottom

Adjust the length and fasten the wire (8) at the bottom on the side of the ladder that fastens to the wall. **NB** Check the function prior to assembly.


## Alternative 1: Anchoring to wall with angle brackets

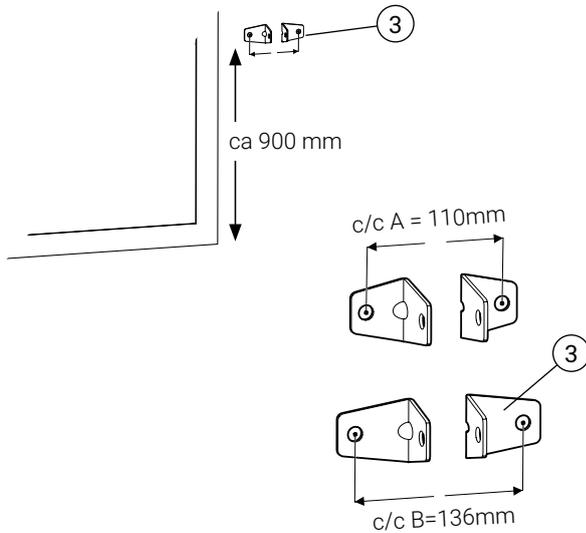

### 7. Installation of the first bracket

Screw the top bracket (3) to the wall, approx. 900 mm above the windowsill or rung.


The bracket (3) can be turned to compensate for unevenness in the wall.

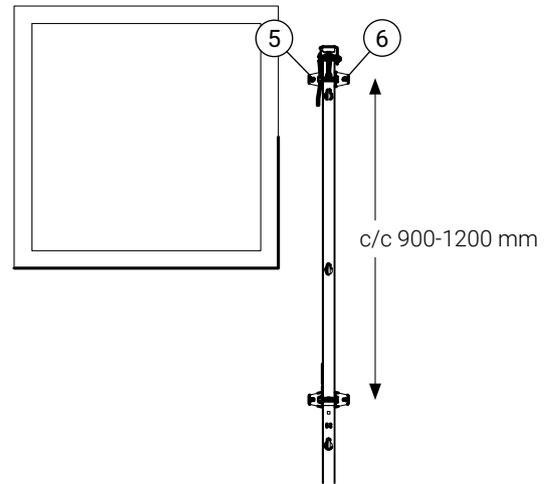

### 8. Install the remaining brackets.

Hang the ladder from the top pair of brackets using bolt M10x60 + nut. (5, 6) and solder in place. Then install the remaining bracket pairs at c/c 900-1200 mm.

## Alternative 2: Anchoring direct to wall without angle brackets

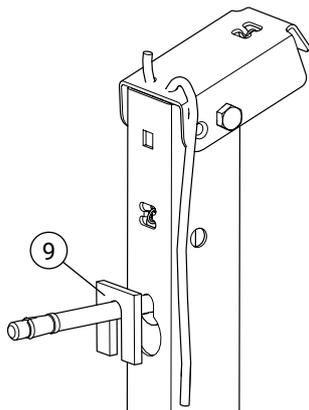

### 7. Anchoring


Anchor the first attachment point in the wall.

Approx. 900 mm above the windowsill or rung.

Use suitable protective bolt material.

See MA1001 for screw loads.

Spacer washers (9) are available as accessory.

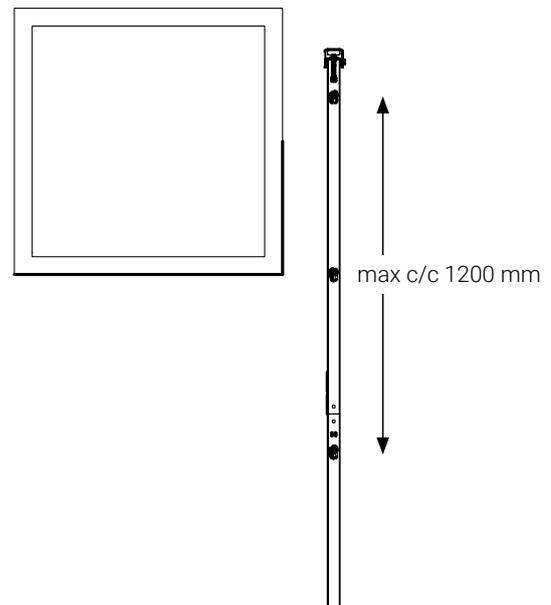

### 8. Anchoring the remaining brackets.

Hang the ladder from the top anchor point and solder in place. Then, install remaining anchor points at max. c/c 1200 mm