


# Universal railing, corner railing side bracket


Part	Part. no.
1 Railings	See table
2 Side bracket L	UV1001
3 Side bracket R	UV1002
4 Washer	UL4200
5 Bolt M10x20	BU1201/BU1200
6 Flange nut M10	MU1001/MU1010

Part	Part. no.
7 Kick strip	SL0410/SL0510/SL0710/ SL1010/SL1510/SL2010
8 Self-tapping screw 5.2x22	SS5221/SS5225
9 Gull wing connection	MK4200
10 Tube coupling	KP4277

The edge distance applies for M12 expander in concrete

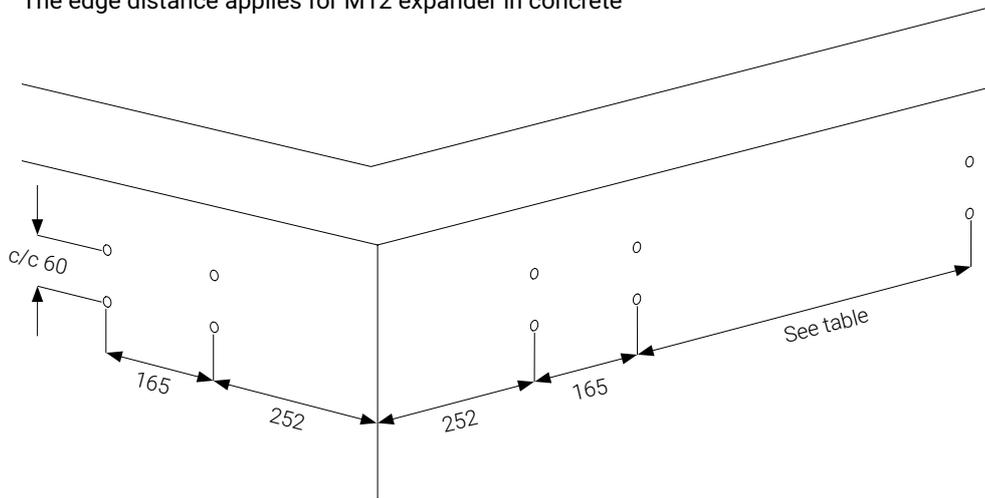


Railing	c/c measurement
UI2042 / UB2042	1835
UI1542 / UB1542	1335
UI1042 / UB1042	835
UI0742 / UB0742	535
UI0542 / UB0542	335
UI0442 / UB0442	235

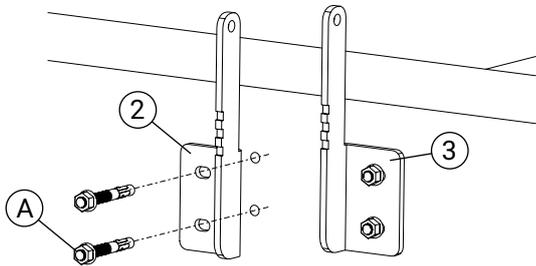

### 1. Installation of side bracket


Securely screw the left and right side bracket (2,3) using 2 attachments (A) per bracket. (NOT included).

**NB** Keep an eye on the right and left side.

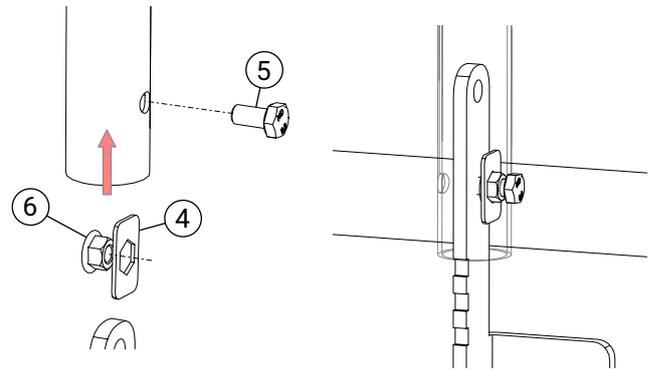


### 2. Installation of railing lock

Fit a nut (6) + lock washer (4) on a railing lock. Insert the railing tube and fit a bolt (5).

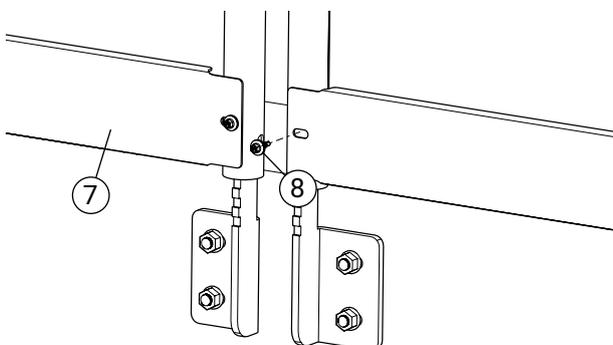

### 3. Installation of kick strip

Any kick strip (7) is to be fitted using 2 self-tapping screws (8).

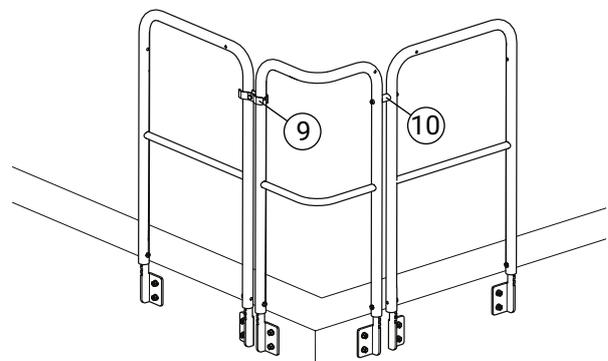

### 4. Installation of couplings

Install a gullwing coupling (9) or tube coupling (10) between the railings.