



Detalj	Art. nr.
1 Railings	See table
2 Single bracket	UM1000
3 Double bracket	UM2000
4 Washer	UL4200
5 Bolt M10x20	BU1201/BU1200
6 Flange nut M10	MU1001/MU1010

Detalj	Art. nr.
7 Kick strip	SL0410/SL0510/SL0710/ SL1010/SL1510/SL2010
8 Self-drilling screw 5,2x22	SS5221/SS5225
9 Gull wing coupling	MK4200
10 Tube coupling	KP4277

Railing	c/c measurement
UI2042 / UB2042	1996
UI1542 / UB1542	1496
UI1042 / UB1042	996
UI0742 / UB0742	696
UI0542 / UB0542	496
UI0442 / UB0442	396


1. Casting of mounts

Dig a hole \varnothing 50 cm. Depth 45 cm. c/c according to table. Fill with macadam or concrete. Turn the single brackets (2) so that they are angled inwards towards the double brackets (3).

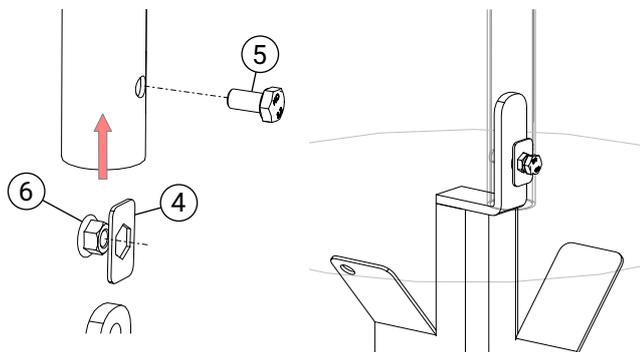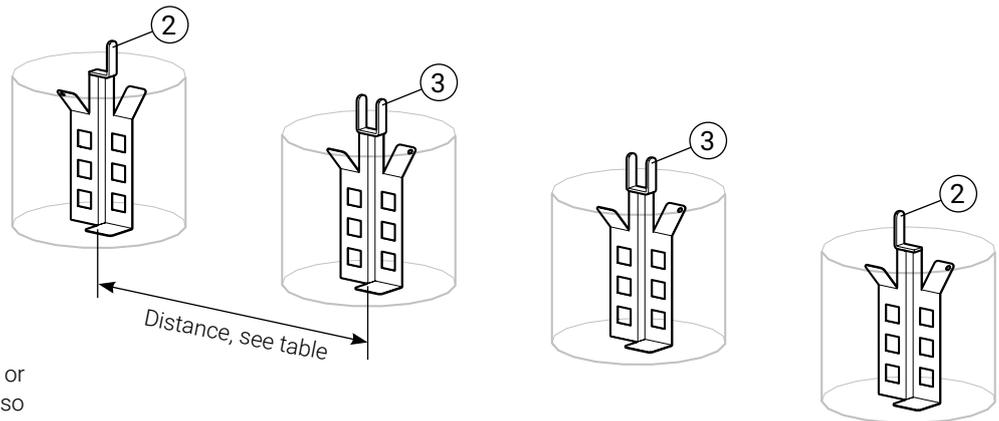


2. Installation of railing locking

Assemble a nut (6) + lock washer (4) for a railing lock. Insert into the railing tube and install a bolt (5).

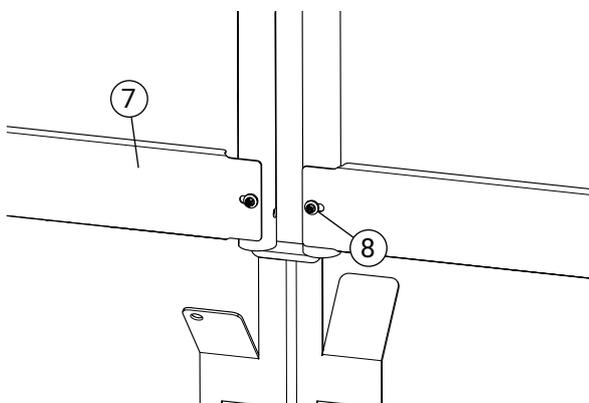

3. Installation of kick strip

Ev. kick strip (7) is mounted with 2 self-drilling screws (8).

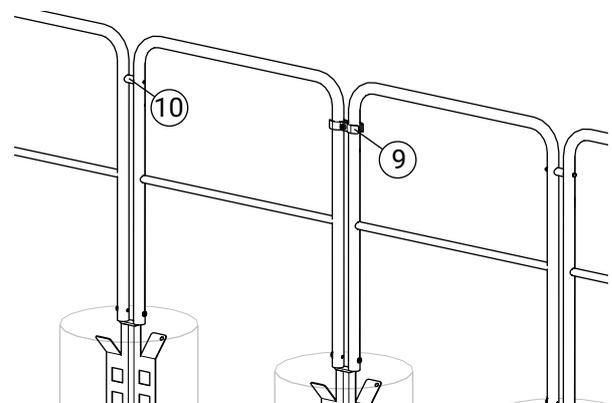

4. Assembly of couplings

Fit a gullwing coupling (9) or tube coupling (10) between the rails.