



	Part	Part. no.
1	Anchorage point for lifelines	FP5150
2	Sealing plate	TP3551/TP3645
3	Coach bolt M10x30	VB1301/VB1305

	Part	Part. no.
4	Bolt M10x20	BU1201/BU1200
5	Nut M10	MU1001/MU1010
6	Rubber washer M10	GB5010

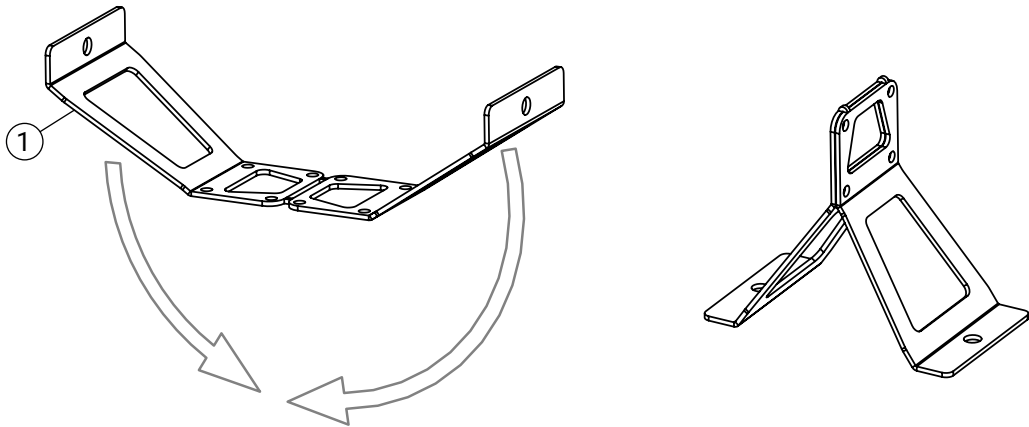

1. Fold the bracket

Fold the bracket (1) by hand. **ATTENTION!** Remember to fold the bracket in the right direction. Only bend once. Bending it more than once will damage it and will need to be replaced.

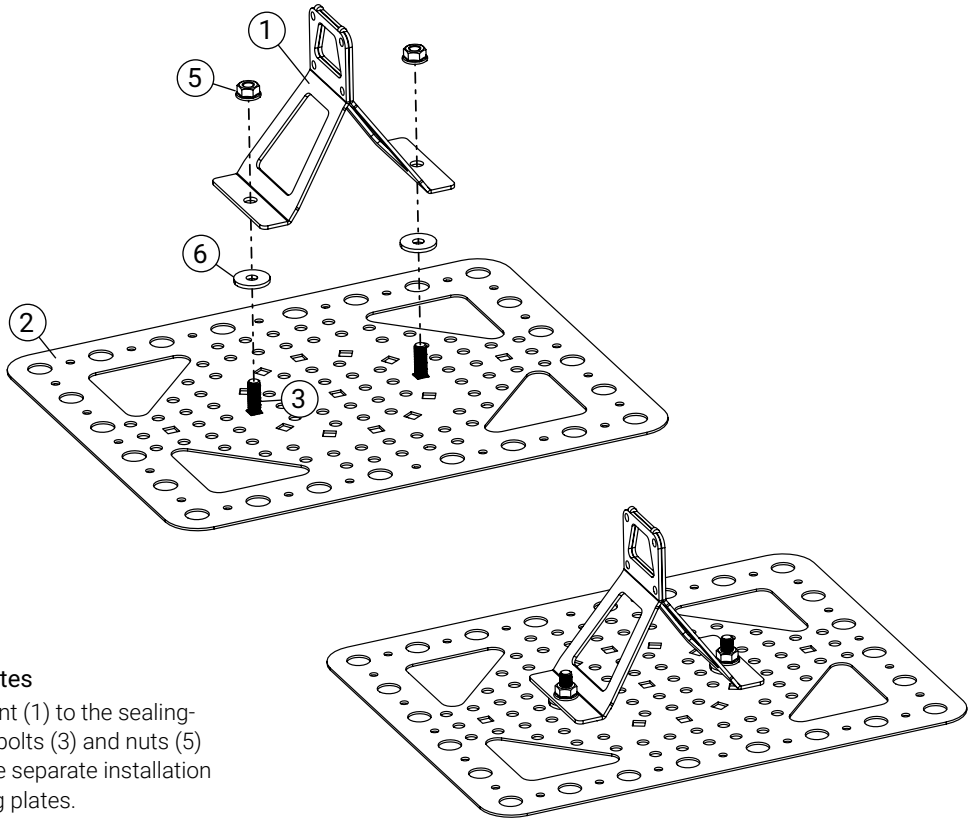

2. Fit to attachment plates

Screw the anchorage point (1) to the sealing-plates (2) using 2 coach bolts (3) and nuts (5) + rubber washers (6). See separate installation instruction for the sealing plates.